

AMPRO
2000

USER MANUAL

BLUETOOTH



since 1984®

AIR fair

EMISSION MONITORING SYSTEMS


AMPRO 2000

Using Bluetooth with the MRU4u app



This app is available for both Android and iOS.
Download the MRU4u app from the Play-store or Apple-store.

Make sure your analyzer has the correct Bluetooth settings!

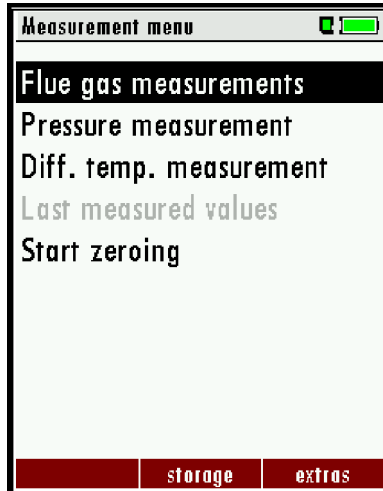


Measurement menu

Press F3 (extras)




Extras menu

Press OK for settings

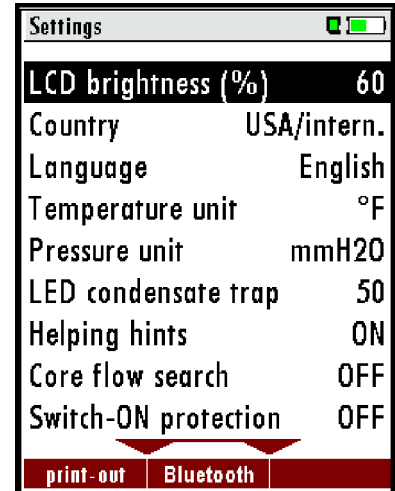


Settings screen

Press F2 for Bluetooth

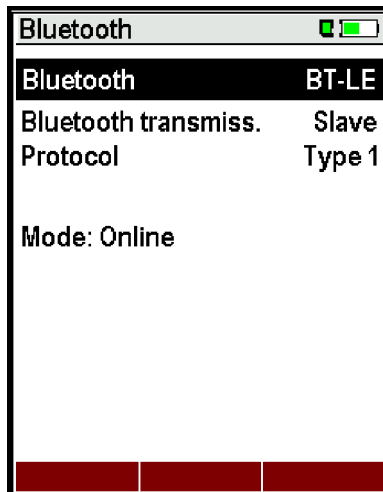

BT-LE for iOS

Modify with arrow left/right

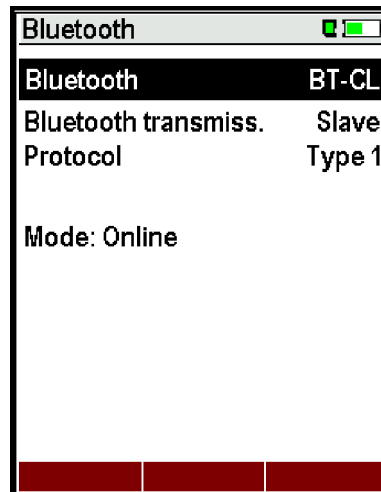

BT-CL for Android

Modify with arrow left/right

If your analyzer doesn't have the top line as shown here, then your analyzer is for ANDROID ONLY!
You must restart the analyzer once you have modified any of these parameters!

AMPRO 2000

Using Bluetooth with the MRU4u app




Pairing your analyzer with your Smartphone - Activate Bluetooth in your phone


You can't connect your phone to the analyzer if another phone is already paired with the analyzer!



Start the MRU4u on your phone

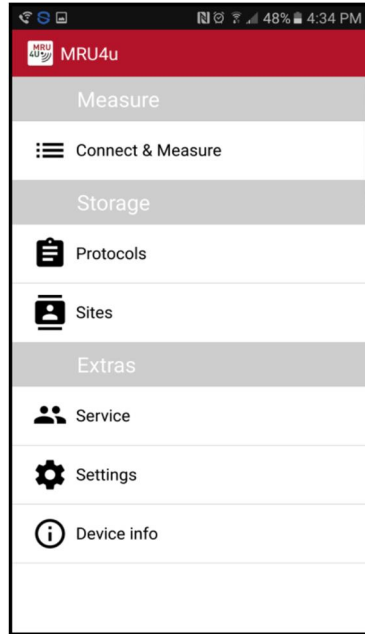


Press connect and measure

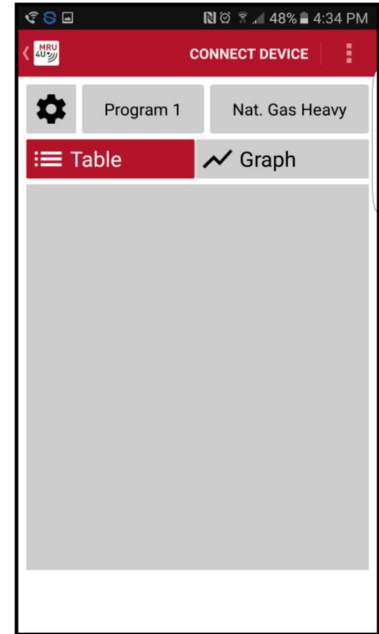


Press connect device



Select your device

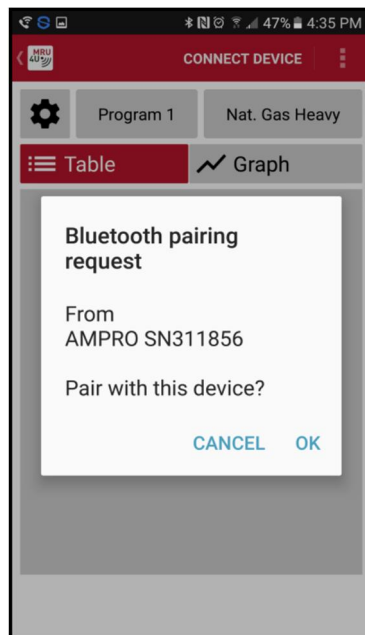

Confirm with OK

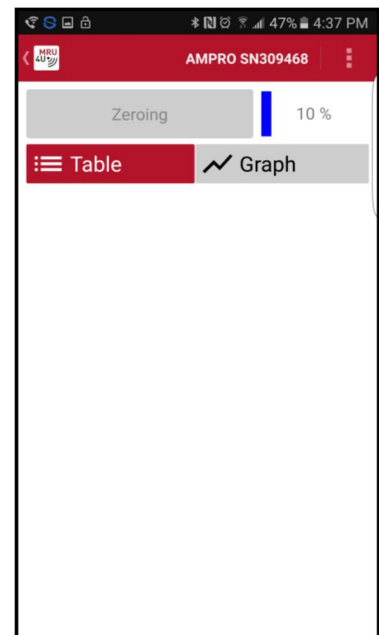

Screen while analyzer is zeroing


If this screen stays empty, another phone might already be paired. Disconnect the other phone first!


AMPRO 2000


Using Bluetooth with the MRU4u app




Taking a measurement / adding parameters

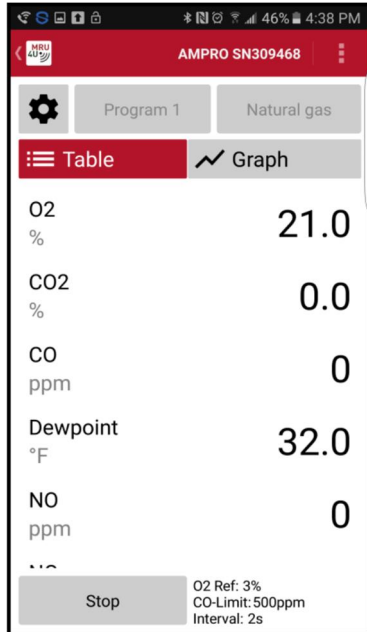


Screen zeroing completed
Press  to modify screen contents

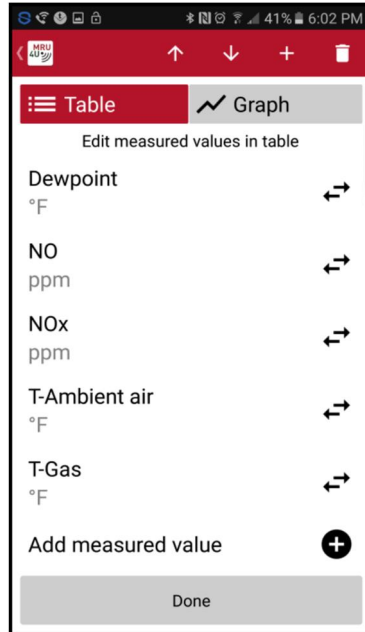


Select and then press Done
Press + for additional parameters

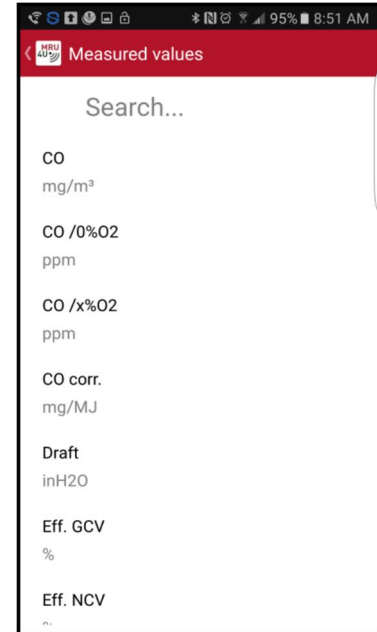


Select the parameter you wish to add.
Repeat this step for each additional parameter

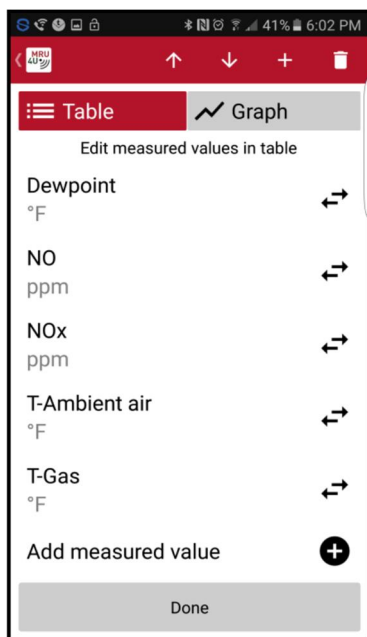

Press "Done" to return to measurement screen

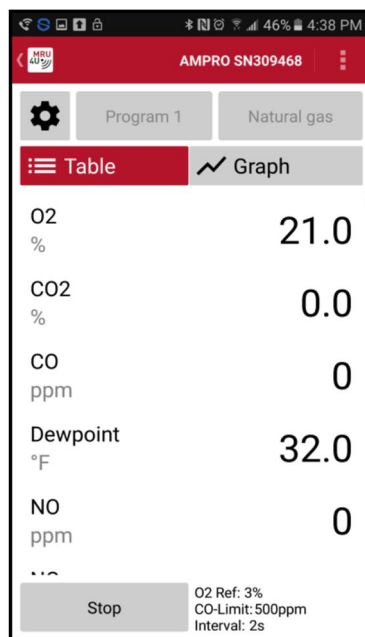


Press "Stop" to stop the measurement

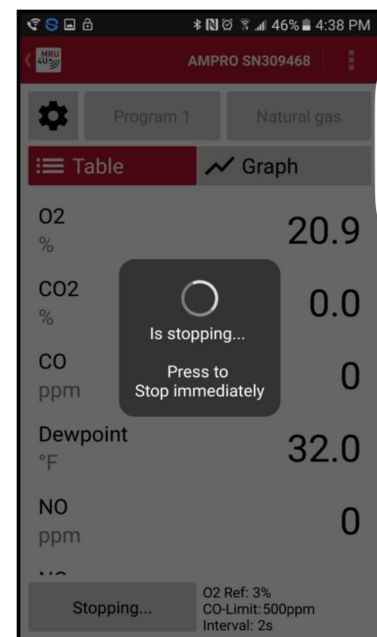


Analyzers pump stops

AMPRO 2000

Using Bluetooth with the MRU4u app

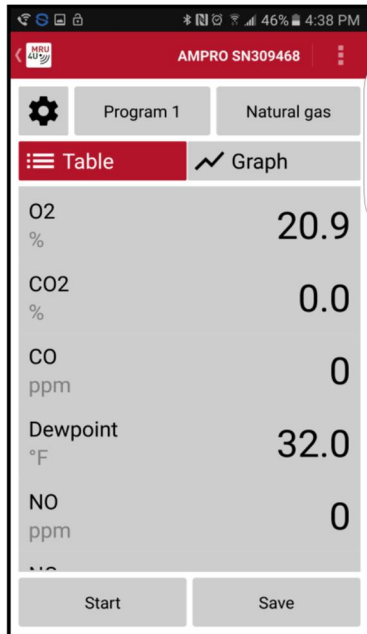


Screen turns grey
Press save to save measurement to the phone

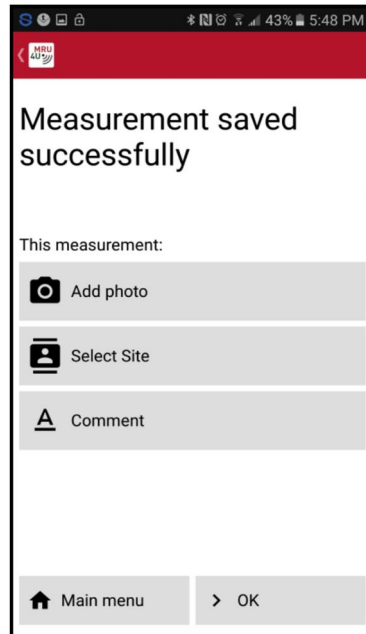


You can add a photo
you can add comments
Save the measurement to a site to view it


Additional Information

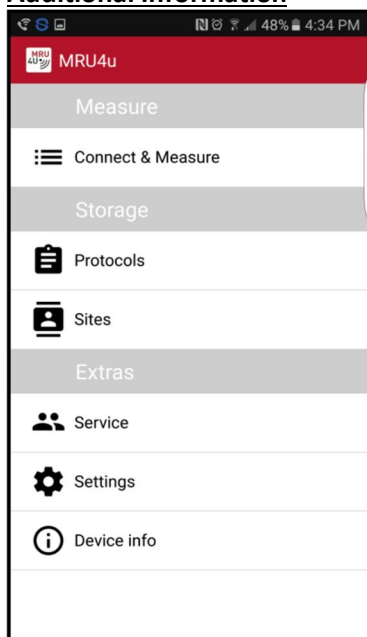

Main page

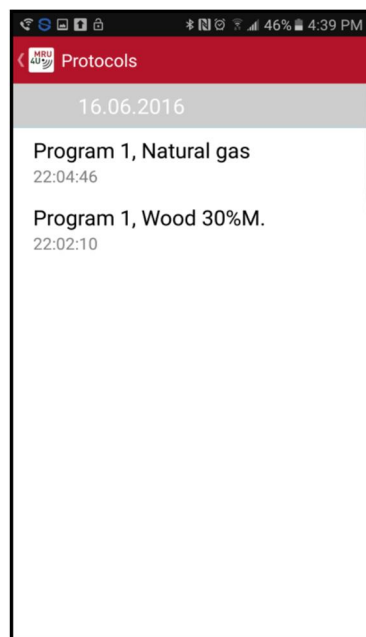


Protocols
Shows saved measurements
Click on any saved measurement

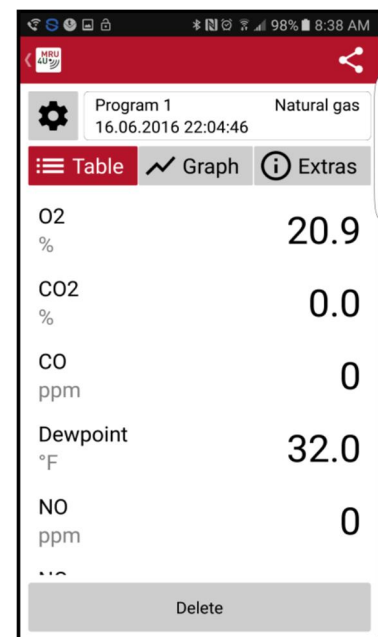


Protocols
Saved measurement
Displayed as "Table"

AMPRO 2000

Using Bluetooth with the MRU4u app

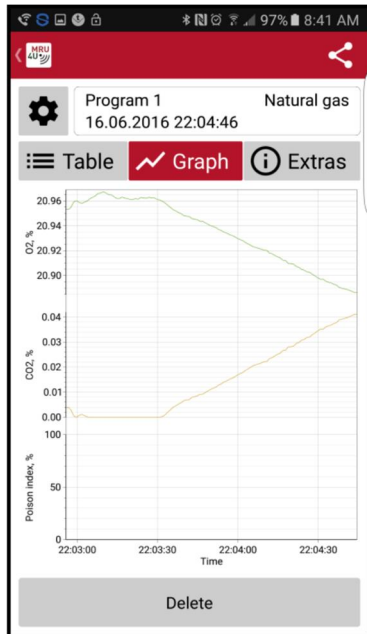

Protocols
Saved measurement
Displayed as "Graph"

Protocols
Saved measurement / EXTRAS
 Use this button to send the measurements per email

Main page


Sites
Select a site to view it
Press "New site" to add one

Sites
New site, enter information


Sites
Enter information then "Save"

AMPRO 2000


Using Bluetooth with the MRU4u app

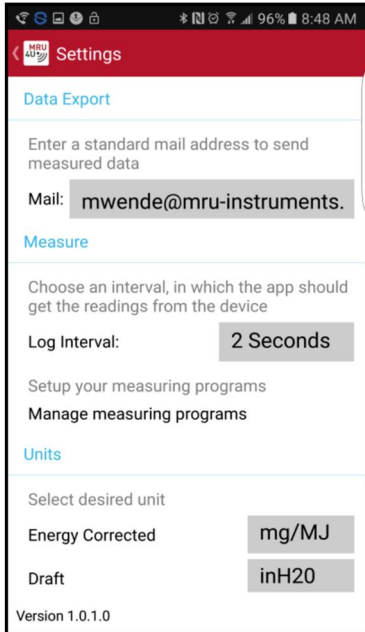


Settings
Insert email address
Change log intervals
Modify measuring units

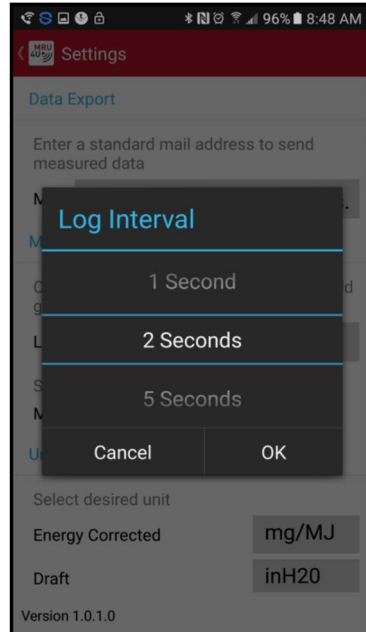


Settings
Change log intervals

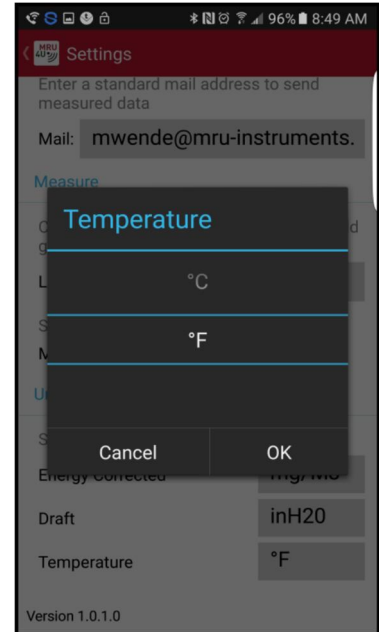

Settings
Modify measuring units

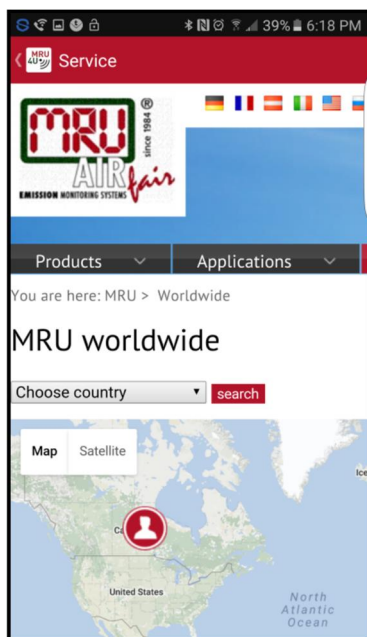

Service
Find a MRU service location

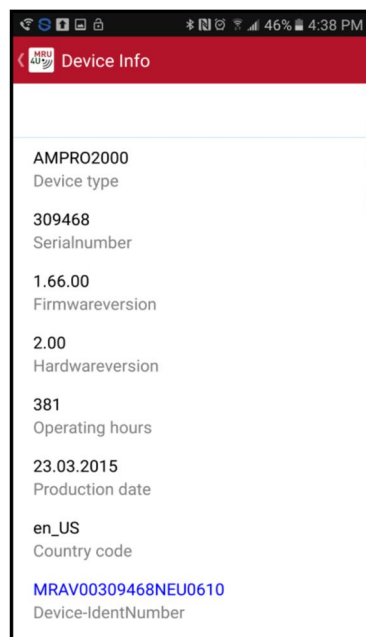

Device info
Shows details about the connected analyzer